

## Roller Guides & Circle Cutting Attachments



PART NO.	ANGLE	CONNECTION FOR TIPS	CUTTING ATTACHMENTS / CUTTING TORCHES	NOTES
I-69-4	90°	6290	142, 62-5, 42-3, 42-4, 49-3, 573, 72-3, 73-3	Single wheel guide
I-69-5		3690	36-2	
I-69-6	45°-135°	6290	142, 62-5, 42-3, 42-4, 49-3, 573, 72-3, 73-3	
I-69-6-HV		1-101-HV	V-Series	
I-69-7		3690	36-2	
R-69-3B	90°	6290	142, 62-5, 42-3, 42-4, 49-3, 573, 72-3, 73-3	
R-69-4C		8290	NM-250, 880-NM, 59-3	
R-69-880		6290	880	
R-69-A		2890	28-L	

## Converters



38-2GBL 38-2GBR

PART NO.	FROM (FEMALE)	TO (MALE)
38-2AL	9/16"-18-UNF-3B-LH	.622"-18-UN-LH
38-2AR	9/16"-18-UNF-3B-RH	.622"-18-UN-RH
38-2FL	9/16"-18-UNF-3B-LH	M16x1,5-6g-LH
38-2FR	9/16"-18-UNF-3B-RH	M16x1,5-6g-RH
38-2GBL	9/16"-18-UNF-3B-LH	G 3/8" A-LH-UNI ISO 228
38-2GBR	9/16"-18-UNF-3B-RH	G 3/8" A-RH-UNI ISO 228
38-2GR	9/16"-18-UNF-3B-RH	G 1/4" A-RH-UNI ISO 228
38-4GL	9/16"-18-UNF-3B-LH	G 1/4" A-LH-UNI ISO 228
38-3FL	M16x1,5-4H-LH	9/16"-18-UNF-2A-LH
38-3FR	M16x1,5-4H-RH	9/16"-18-UNF-2A-RH
38-5GL	G 1/4"-LH-UNI ISO 228	9/16"-18-UNF-2A-LH
38-5GR	G 1/4"-RH-UNI ISO 228	9/16"-18-UNF-2A-RH
38-6GL	G 3/8"-LH-UNI ISO 228	9/16"-18-UNF-2A-LH
38-6GR	G 3/8"-RH-UNI ISO 228	9/16"-18-UNF-2A-RH

## Needle Valves

Needle valve for precise flow control can replace outlet nipples on regulators. Particularly recommended for laboratory installations.



52-L

PART NO.	GAS	INLET	OUTLET
52-L	Fuel gas	1/4" NPT	9/16"-18-UNF-LH
52-R	Oxygen	1/4" NPT	9/16"-18-UNF-RH

## "Y" Pieces

"Y" piece for attaching two hose lines to same regulator Assembly on regulator outlet.



37-L

PART NO.	GAS	THREADS	NOTES
37-L	Fuel gas	9/16"-18-UNF-LH	WITH VALVES
37-R	Oxygen	9/16"-18-UNF-RH	
37-FL	Fuel gas	M16x1,5-4H-LH	
37-FR	Oxygen	M16x1,5-4H-RH	
37-GBL	Fuel gas	G 3/8"-LH-UNI ISO 228	WITHOUT VALVES
37-GBR	Oxygen	G 3/8"-RH-UNI ISO 228	
37-L2	Fuel gas	9/16"-18-UNF-LH	
37-R2	Oxygen	9/16"-18-UNF-RH	
37-SL2	Fuel gas	G 3/8"-LH-UNI ISO 228	
37-SR2	Oxygen	G 3/8"-RH-UNI ISO 228	